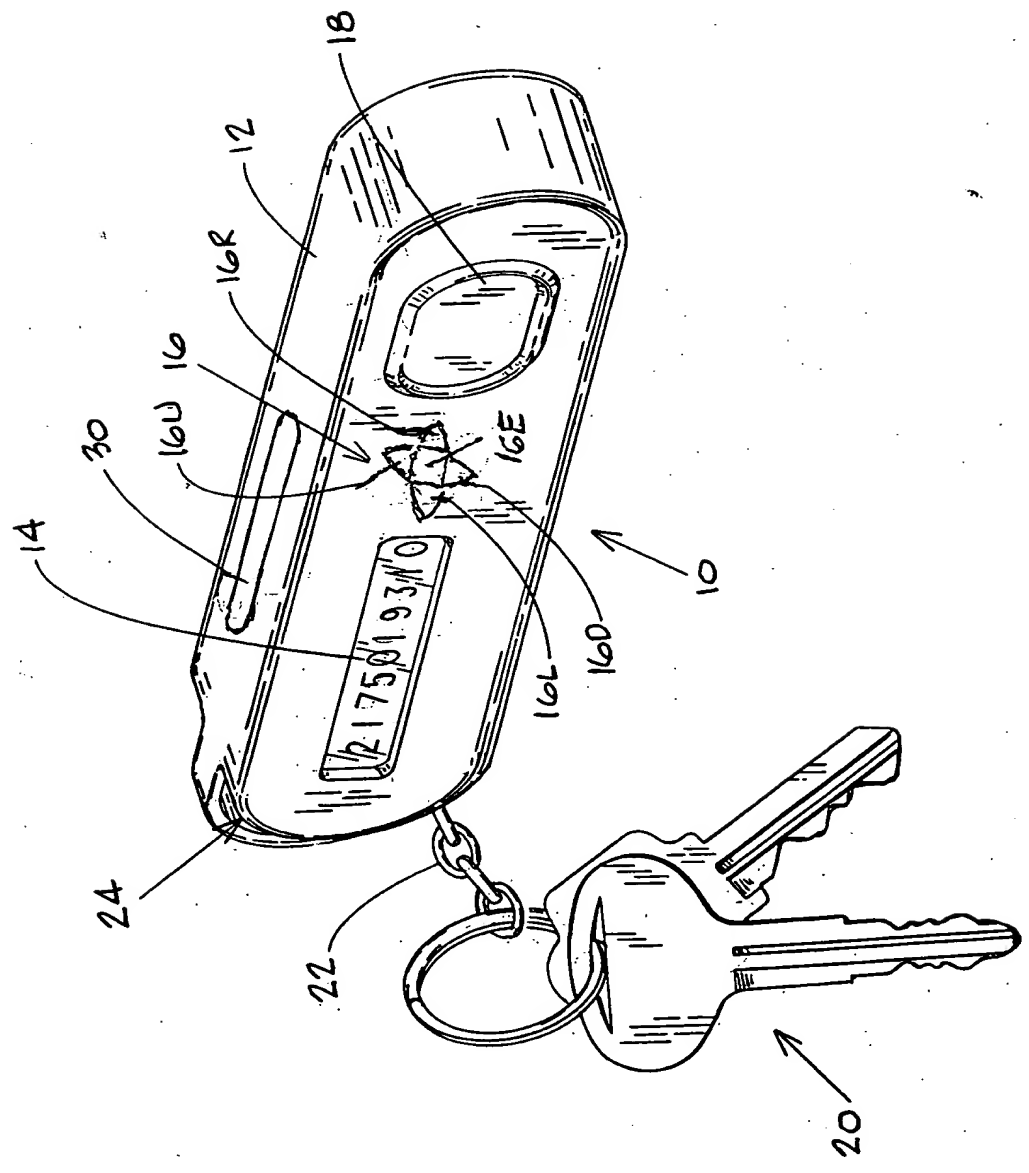


FIG. 1

FIG. 1



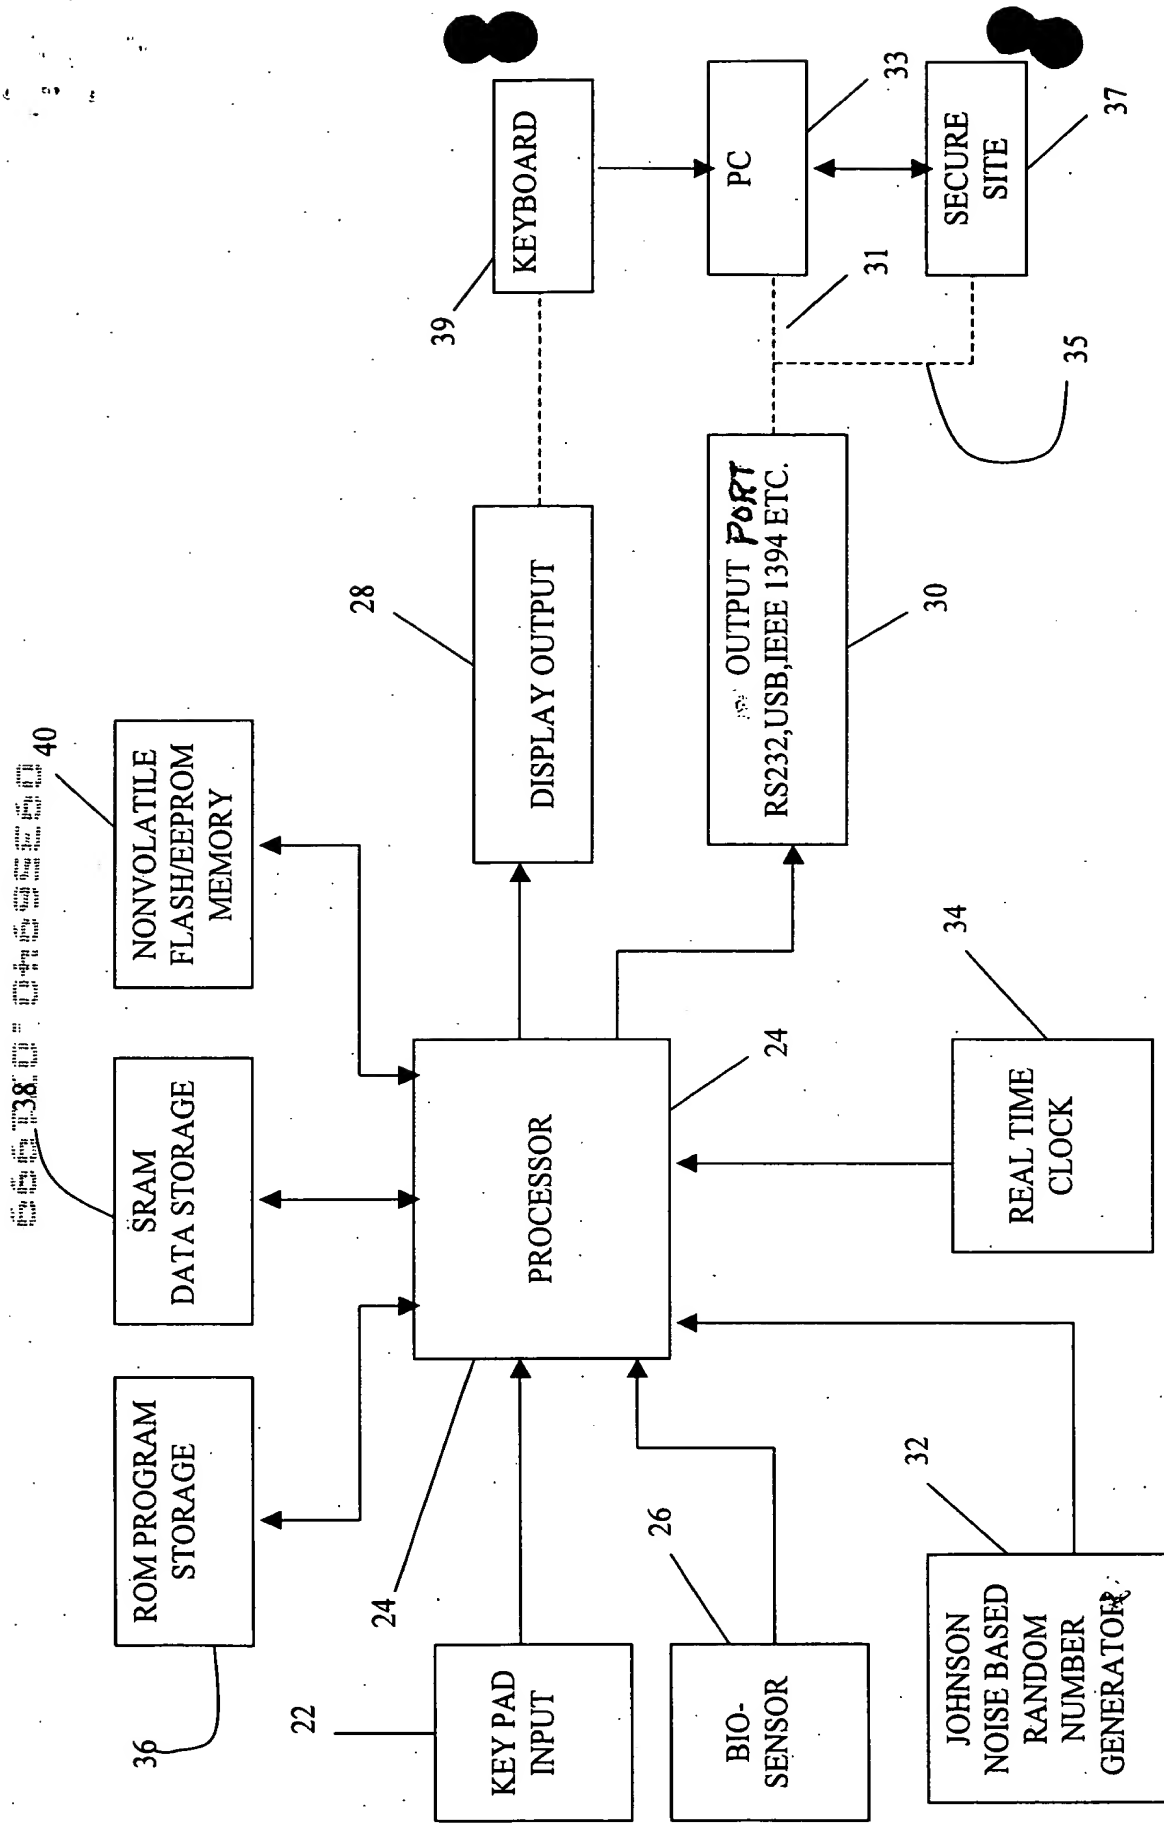


FIG. 2

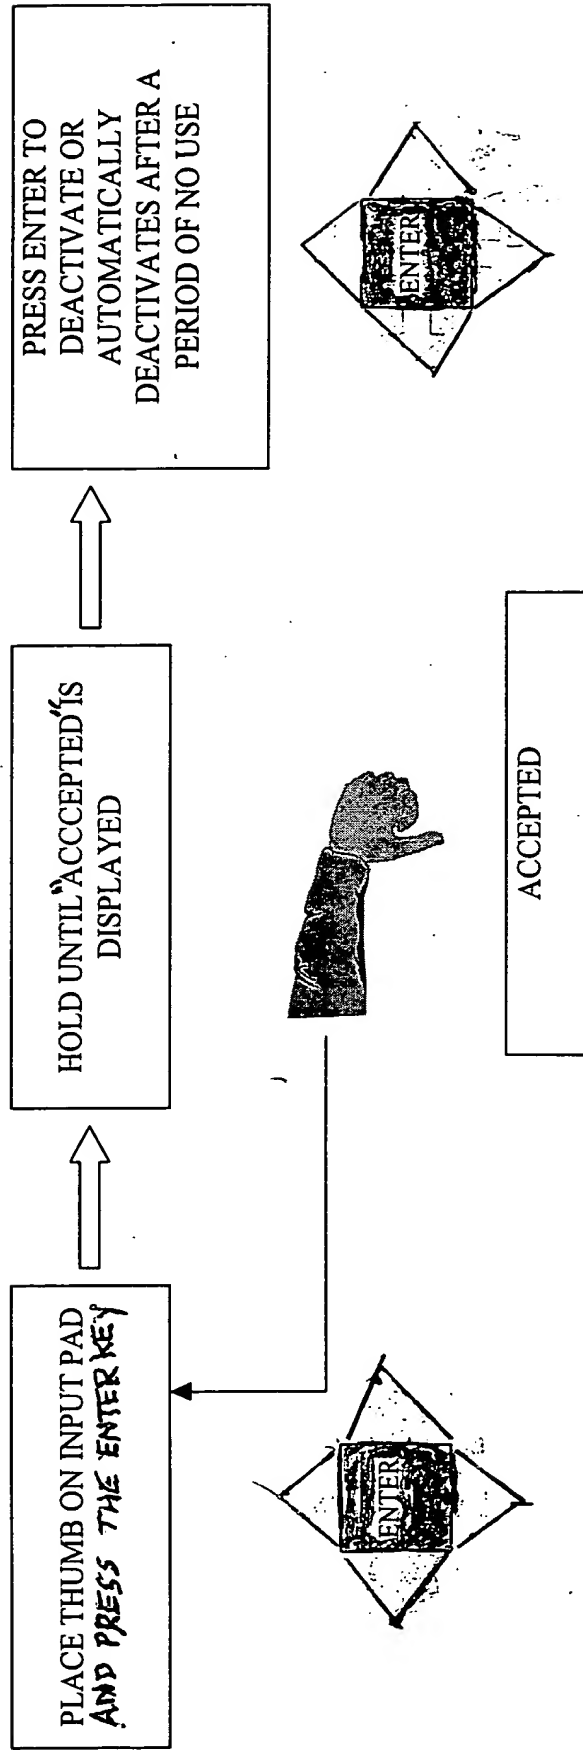


FIG. 3


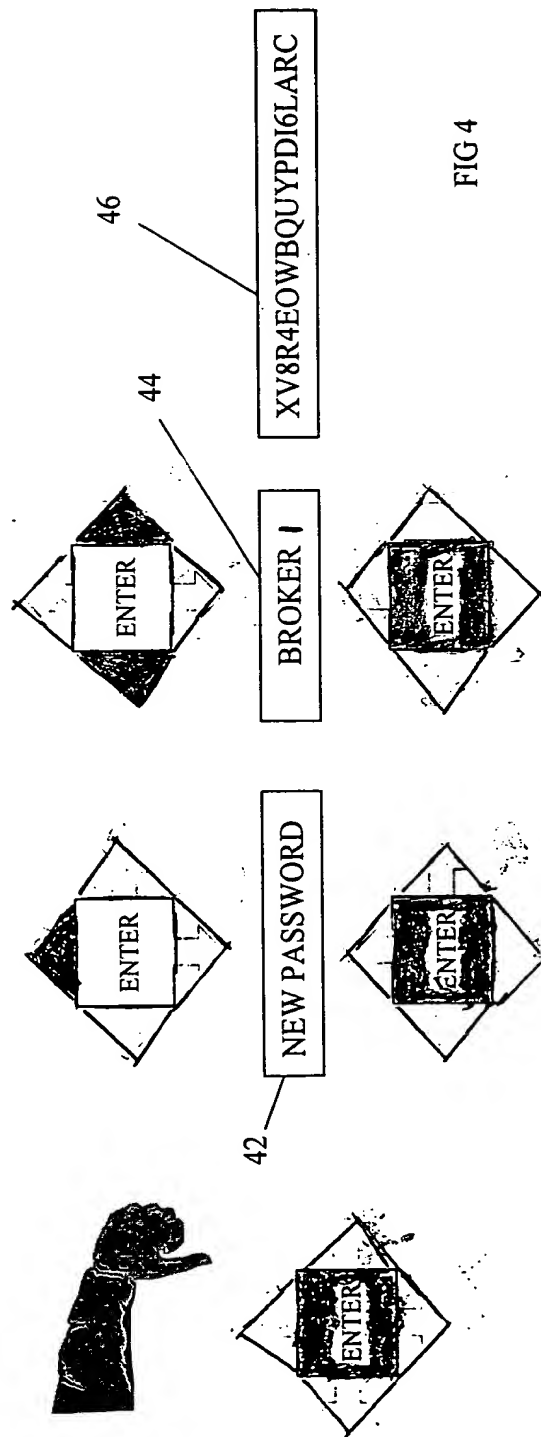


FIG 4

GO ONLINE TO
THE LOGON
SCREEN OF
THE SYSTEM
THE SYSTEM
YOU WISH TO
ACCESS



FOLLOW THE
SYSTEM'S
INSTRUCTIONS
FOR ENTERING
PASSWORD

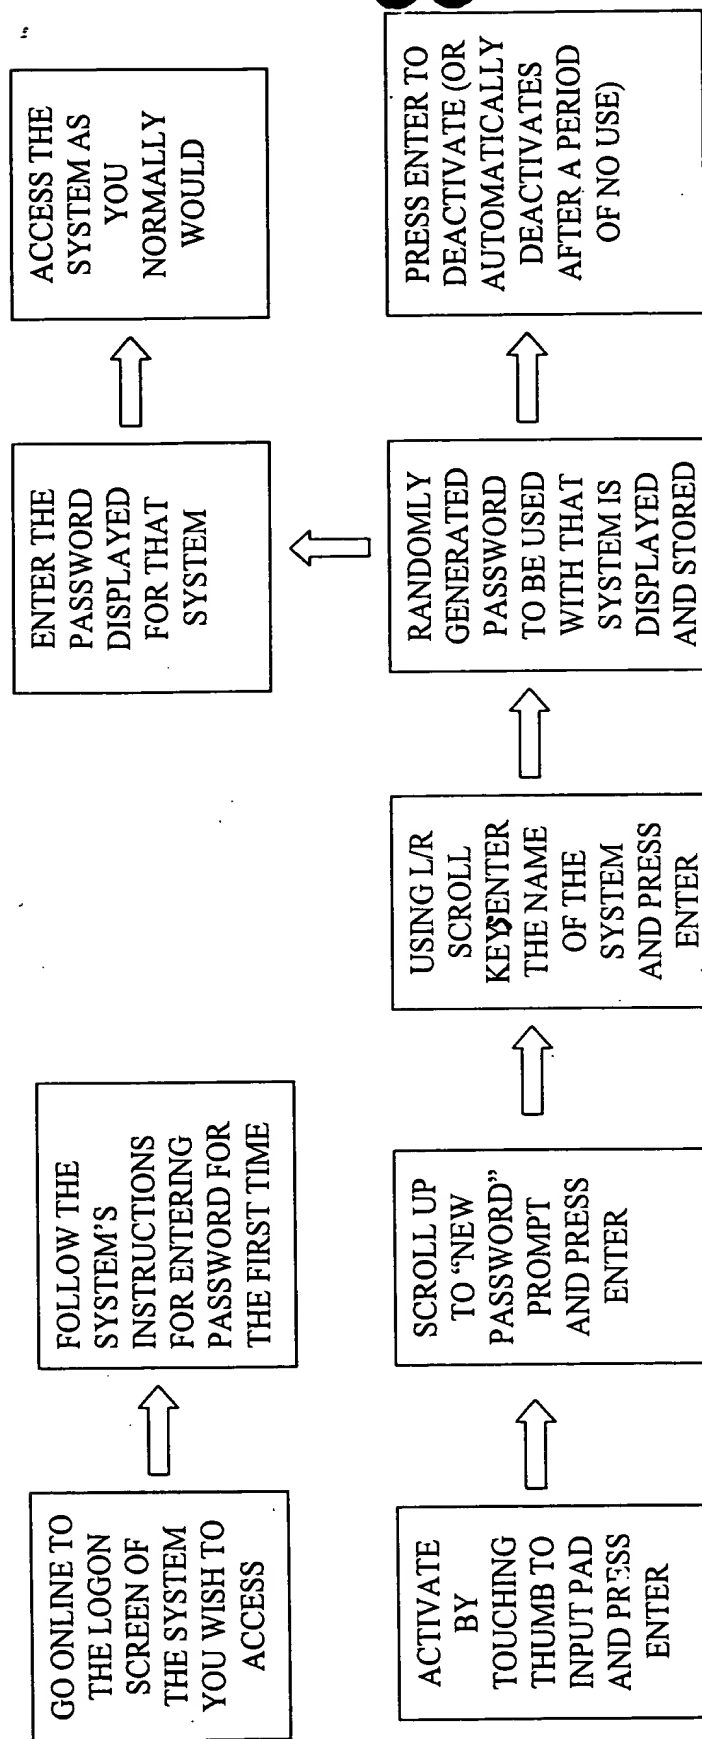

ENTER THE
PASSWORD
DISPLAYED
FOR THAT
SYSTEM

ACCESS THE
SYSTEM AS
YOU
NORMALLY
WOULD

ACTIVATE BY
TOUCHING
THUMB TO
THE INPUT
PAD AND
PRESS ENTER




SCROLL DOWN
TO THE NAME
OF THE SYSTEM
AND PRESS
ENTER



~~P~~ASSWORD
PREVIOUSLY
GENERATED
FOR THAT
SYSTEM IS
DISPLAYED



PRESS ENTER TO
DEACTIVATE (OR
AUTOMATICALLY
DEACTIVATES
AFTER A PERIOD
OF NO USE)

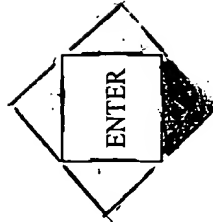

BROKER /



XV8R4EOWBQUYPD16LARC



FIG 5

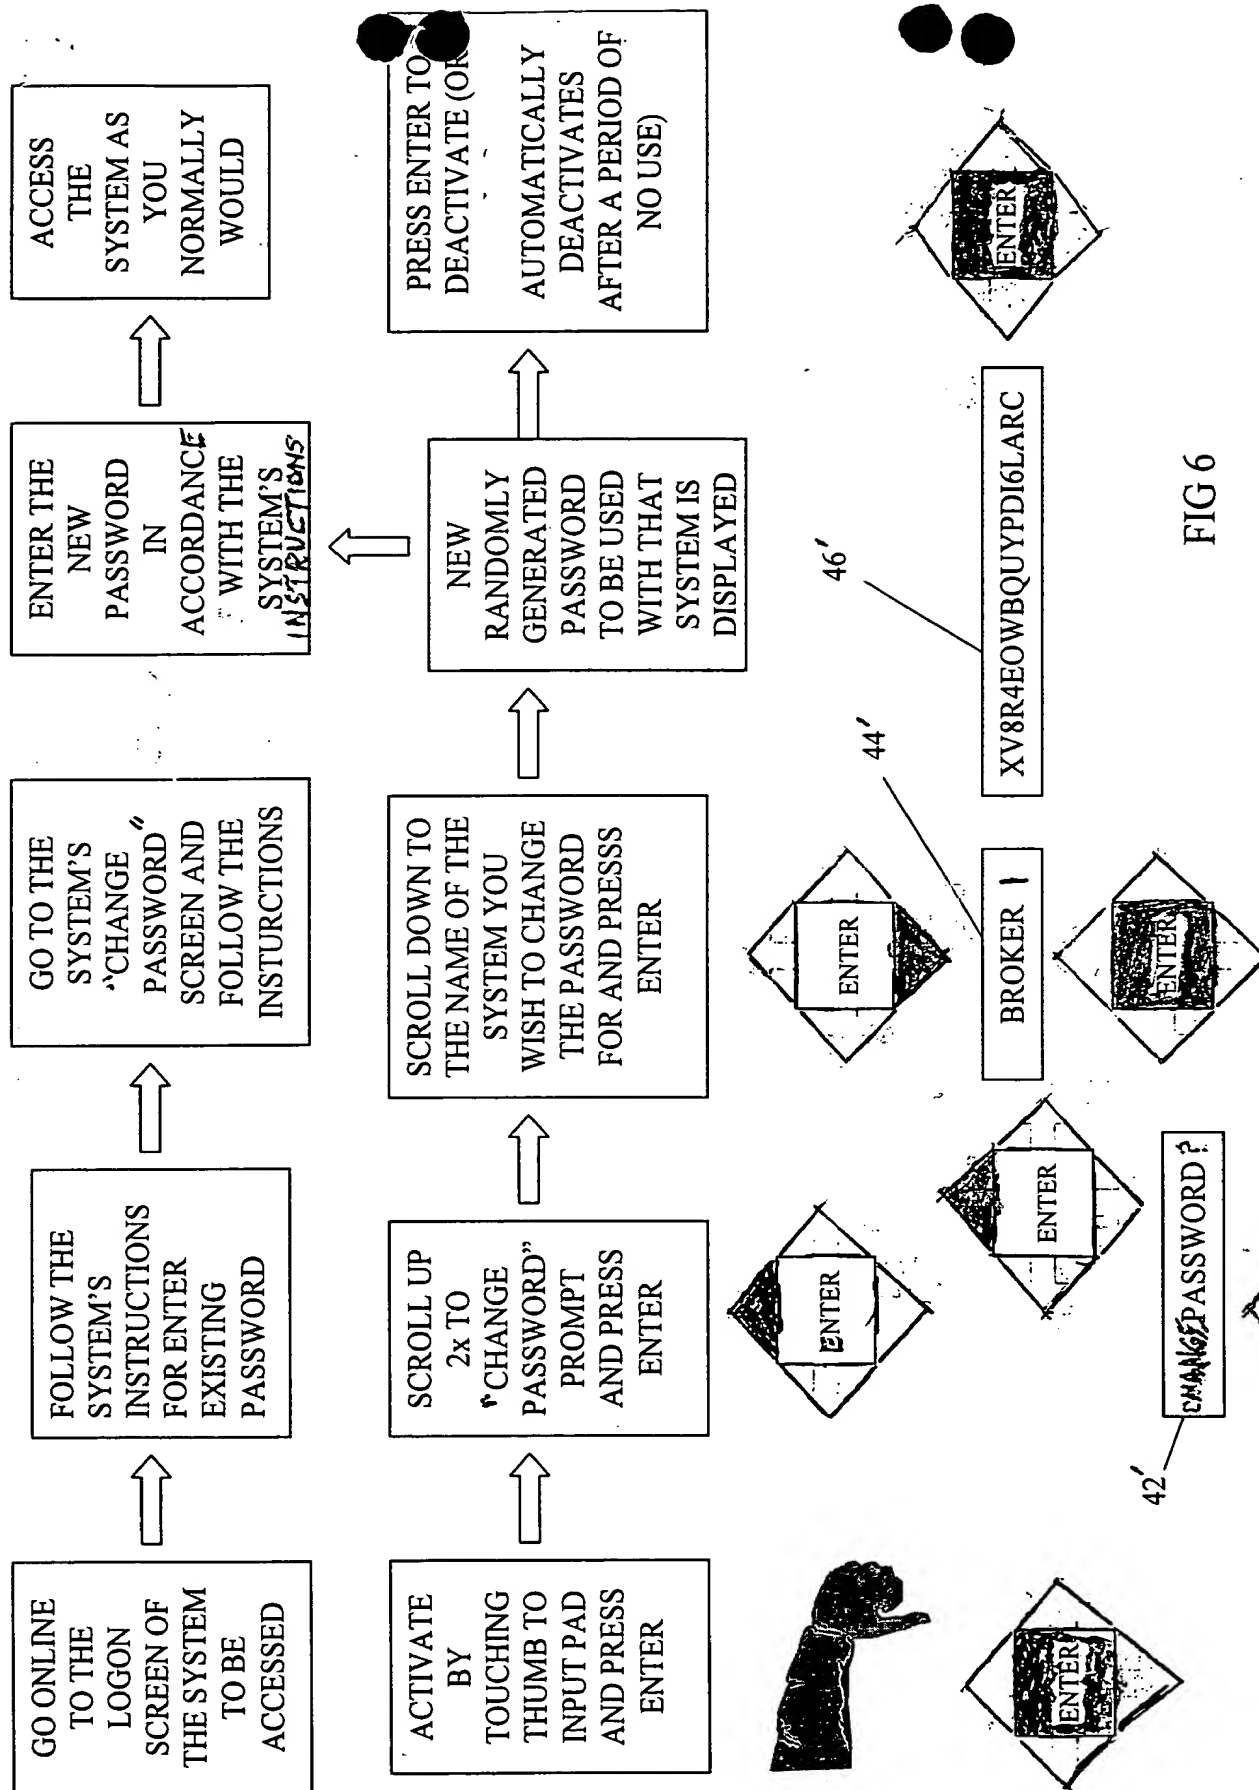


FIG 6

RECALL/DISPLAY

RECALL/
DISPLAY &
MANAGE
MODE

MANAGE

Activate Unit

Generate
New
Password
Mode

Scroll Down to
Name of
System
Password is
desired for and
Press Enter

Unit
Determines if
Password has
expired and
Displays
Password

If Password has
expired, Unit will
flash and display
"Change
Password?"
yes/no

Reading From
Display Enter
the Password
displayed via
PC Keyboard

Reading From
Display Enter
the Password
displayed via
PC Keyboard

Turn
Off Unit

N

Y

Change
Password?

FIG. 7

50

Scroll Up
to Entry
Labeled
"New
Password"
and Press
Enter

Unit
Displays
Blank
Blinking
Display

Enter up to 20
alpha numeric
characters to
name the system
for which the
password will be
created and press
enter

Unit displays a
template for the
Password to be
created-indicate
format (length;
a/n positioning;
security level
and press enter

Password
is created
and
displayed

Reading
from Display
enter the
password
displayed via
keyboard
PC

Turn
Off
Unit